

AVS OPERATING INSTRUCTIONS

| | | | |
|--------------|----------------|--------------|---------|
| STEP TYPE | EXM, KM and TM | Last Updated | 19/6/06 |
| VEHICLE TYPE | | Revision no: | 2 |
| SIDE | | | |
| ENTRANCE | | | |
| COUNTRY | | | |



To deploy step:

Push in the step with your foot and release keeping the step under pressure with your foot.

ATTENTION:

These steps are professional pieces of equipment and need to be operated by a trained driver or attendant. DO NOT release step and allow it to spring out.

NOTE:

The pedal does not DEPLOY the step. Pedal shapes may vary but the operation remains the same for EXM, KM and TM type steps.



To stow step:

Stand close to step. Use the grab handle or another part of the vehicle to steady yourself. Place foot on lever and push. Step will release and slide in. The mechanism will "CLICK" as it reaches the stowed position.

Warning buzzer/light if fitted:

If the warning buzzer or light operates step is deployed and must be stowed before driving away.

Ground Clearance:

Remember your vehicle ground clearance is reduced by the step which has been fitted to improve passenger access.

DRIVE YOUR VEHICLE ACCORDINGLY

TEL 01948 880010
AFTER SALES 01948 780238
FAX 01948 880020
www.avssteps.co.uk

