

AVS SERVICE INSTRUCTIONS

STEP TYPE K and T
VEHICLE TYPE

Last Updated 6/1/05
Revision no 1

AVS STEP WHEEL REPLACEMENT

Please find enclosed replacement rollers for AVS electric and manual steps. They are different to the ones on older steps.

NOTE: Ensure spacing from side arm remains the same.

They must be positioned in pairs. Front pair with the flange to inside, rear pair with flange to outside.

NOTE: The wheels **MUST** be replaced in pairs. This means that if a wheel on the left of the step is replaced the one on the opposite side must also be replaced. It is recommended that if one wheel requires replacement all 4 are replaced.

AVS

