

AVS STEP SERVICE ROUTINE

STEP TYPE	All AVS steps	Last Updated	19/6/06
VEHICLE TYPE		Revision no:	1
SIDE			
ENTRANCE			
COUNTRY			

AVS Service Routine - EVERY 6 MONTHS

AVS Electric or Manual Steps.

1. Note step serial no and start report
2. Disconnect electrical connections where possible
3. Remove step from vehicle
4. Remove tread plate and lower panel
5. Remove guide rods(Cassette steps only)
6. Clean inside of case
7. Inspect micro switches and clean/lube or replace
8. Inspect tread plate linkage to motor. Check nylon bearings.
9. Inspect and clean/replace stainless steel tubes and rollers as necessary
10. Check nylon guides for wear. Replace as necessary
11. Inspect connections to micro switches and motor including grommets in case
12. Inspect and clean tread plate.
13. Supply and fit weatherproofing kit if not fitted
14. Replace side arm mounting bolts and Loctite as required.
14. Lubricate all parts.
15. Replace cover
16. Refit step. Leave fitting hand tight only.
17. Connect electrics as required. Use waterproof connections is required
18. Operate step approx. 10 times
19. Refit lower panel and tighten fittings
20. Test again and weight test. 150Kg
21. Compile report.
22. Update customer Service Record book.

For details of other service agents in your area contact AVS or see details on our web site www.avssteps.co.uk.

We recommend SILICONE SPRAY be used as a lubricant.

Service interval is recommended 6 months maximum.

Steps should be cleaned monthly or more frequently depending on operating conditions. Cleaning instructions are available on request, on our web site and in the SERVICE DOCUMENTS provided with every step.

TEL 01948 880010
AFTER SALES 01948 780238
FAX 01948 880020
www.avssteps.co.uk

