


AVS FITTING INSTRUCTIONS

STEP TYPE	SLE/SLM450
VEHICLE TYPE	Ford Connect LWB
ENTRANCE	LHS SIDE
CODE	FKFC11LSLSLE450 FKFC11LSLSLM450



PAGE 1

**ALWAYS WORK SAFELY!
FOLLOW STANDARD ENGINEERING
PRACTISE! IF IN DOUBT ASK!**

Photographs detailing how the fitting kit is to be fitted to the step

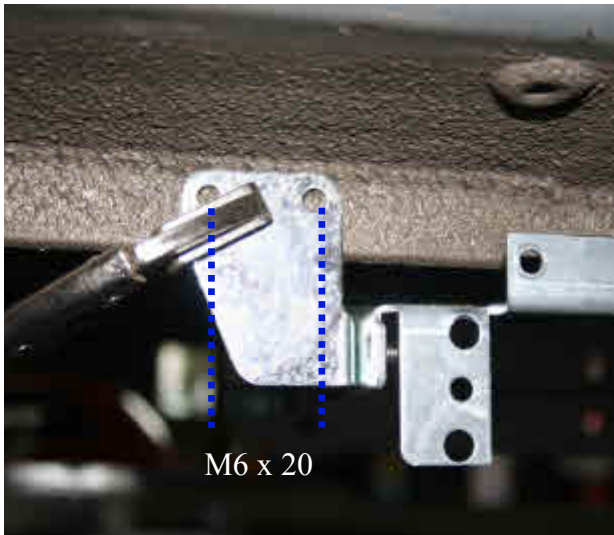


NOTE: THE HAND BAKE CABLE MUST BE MOVED TO CLEAR MANUAL STEP MECHANISM!

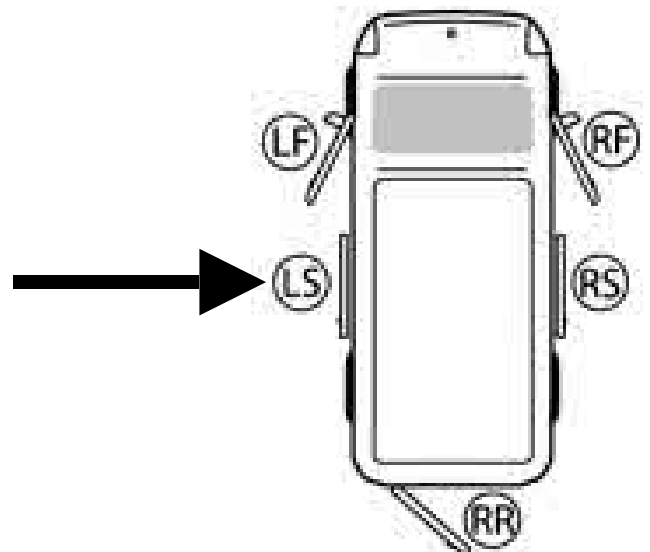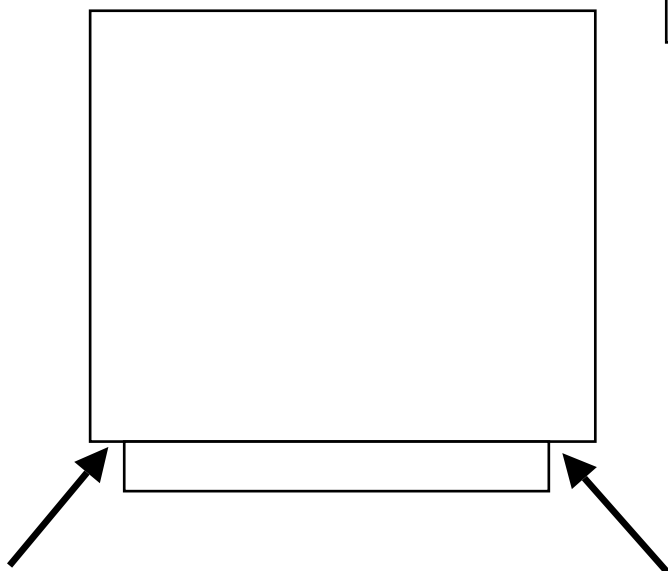

IF IN DOUBT CONTACT AVS ON 0044 (0) 1948 880010

AVS FITTING INSTRUCTIONS

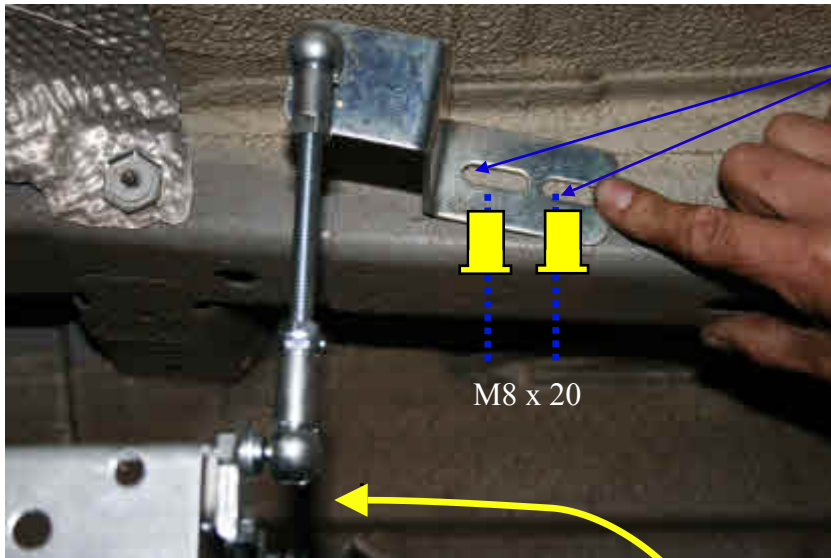

Drill for M8 Nutserts in chassis

M8 x 20



M6 x 8mm MAX

IMPORTANT FITTING NOTES:

Do not force or lever step to fit. Do not push or pull it to reach the cill. This will distort the case and result in early failure of the step and loss of warranty cover.

Do not tighten bolts until step is in final location.

Use slotted holes to allow step to locate without forcing brackets or step case.

Mark locations for holes carefully. If repeated fittings are expected make up a suitable jig to ensure quick and accurate fitting.

Do not use longer bolts than advised in side mountings.



IF IN DOUBT CONTACT AVS ON 0044 (0) 1948 880010

AVS FITTING INSTRUCTIONS



M6 x 8mm MAX

