

Step	SLE450BZY-7
Vehicle	Fiat Scudo TW200
Entrance	Right hand side sliding door
Part No	FKFS211NSRSLE450
Date	30/06/2010




Contents

2 x FIUNISTRUTM8-1	1 x PTM8BALLJ	4 x 4010143 M8 washer
1 x PTFI456 Front LH Bracket	1 x PTFI457 Front RH Bracket	2 x PTFI447 L & R rear Brackets
3 x M8 Nylocs	4 x M6x25 s/s button head	4 x M6 Nylocs
8 x M6 x 12	12 x M6 shakeproof washer	

RIGHT HAND FRONT




RIGHT HAND REAR

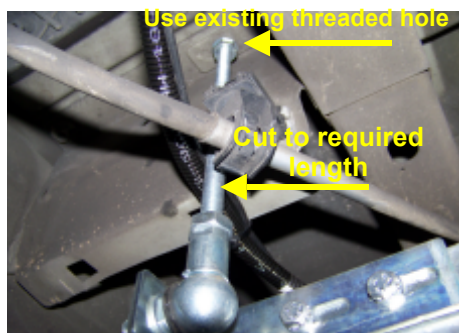

SIDE VIEW



LEFT HAND REAR

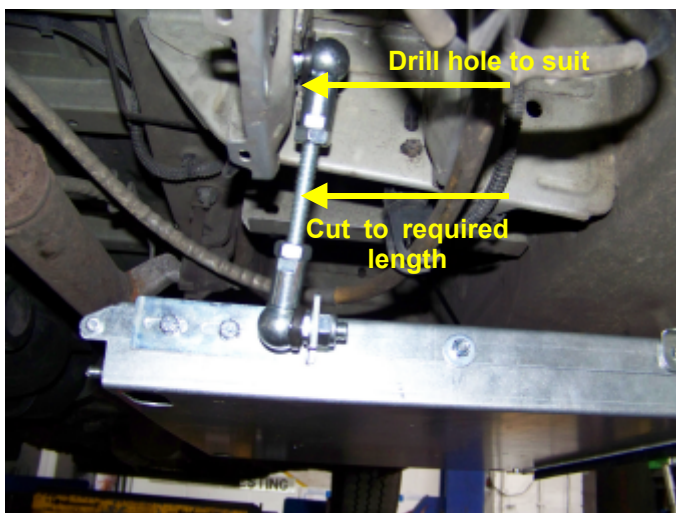

LEFT HAND FRONT



IMPORTANT

Use the M6x12 setscrews and shake proof washers to fit the brackets to the side of the step - do not use longer bolts as this will foul the wheels on the inside of the step and stop it operating.

Use the M6x25 s/s button head, shake proof washers and M6 nylocs to fix the front brackets to the sill