



AVS Steps

Fitting Instructions for Yellow Corner Pieces




Locate the corner piece over the 2 inner prongs (closest to tread) and push part way on. (*as illustration*)



Gently push into place whilst locating the other 2 holes over the remaining lugs.



Push firmly into place by hand

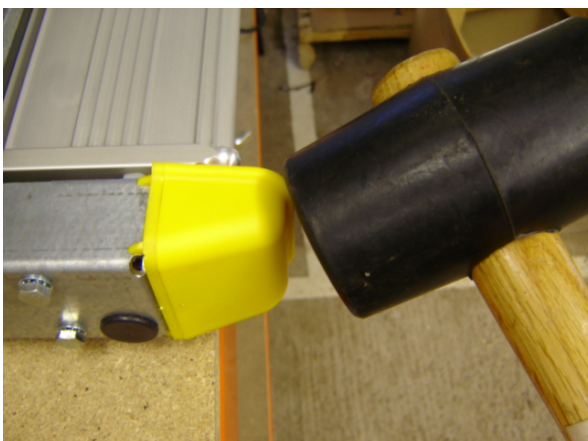

Any remaining small gaps between the front cover and the back plate can be closed up by gently tapping into place with a rubber mallet.