

# Fitting Instructions


## AVS L600

### Renault Master



Vehicle Type	Renault Master
Step Type	AVS L600C
Floor Height	480mm 18.5"
Step 1	245mm (9.5")
Step 2	233mm (9")
Ground Clearance	255mm (10")

All dimensions are approximate and may vary slightly from vehicle to vehicle.

**NOTE:** The L600 must only be operated with a full automatic harness. The step **MUST** be fully deployed before weight is applied to the tread.

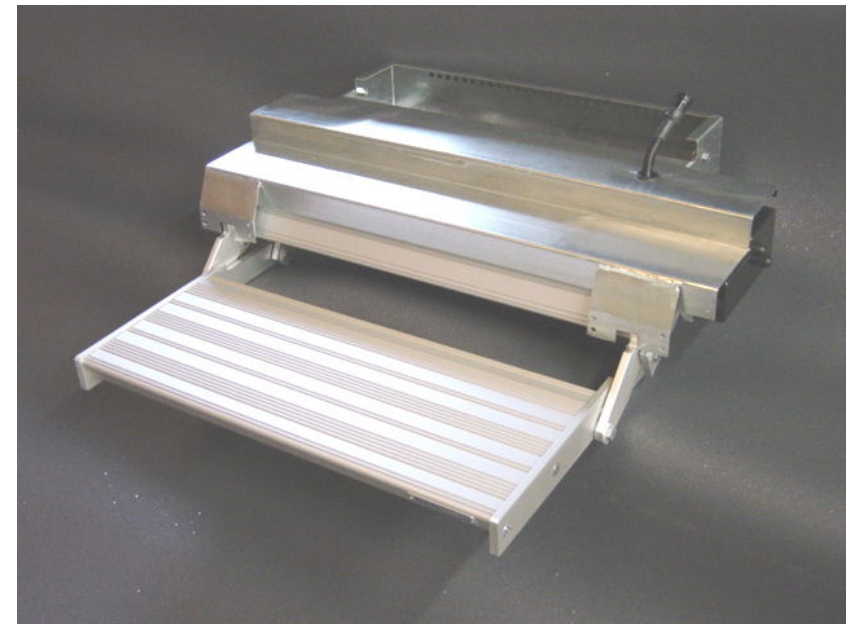

STEP REFERENCE:	STLE600BZ
VEHICLE TYPE	Ford Transit (Van base) LWB RWD Renault Master, Vauxhall Movano
STEP TYPES	L600C Lowering Step
ENTRANCE	Standard Side Sliding Door offside
INSTRUCTION REF	FI600L
COPYRIGHT	All AVS Fitting kits and instructions are protected by copyright.
CONDITIONS	Our standard conditions of sale and warranty apply. Any damage caused to the step during fitting will invalidate the warranty.

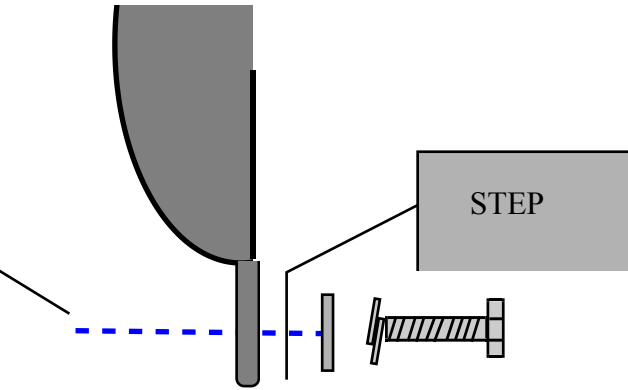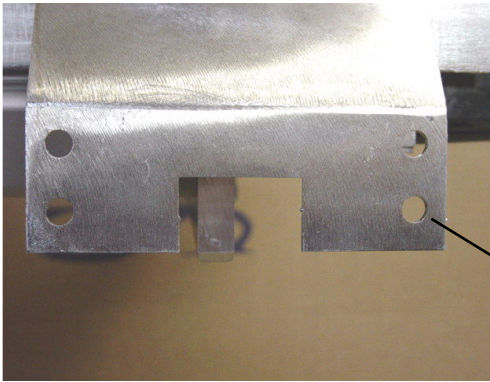

**NOTE:** The L600 must only be operated with a full automatic harness. The step **MUST** be fully deployed before weight is applied to the tread.

