


AVS Fitting Kits
 E600 to LDV
 Side Door
 To fit E600C
 @ Copyright AVS 2003 Revised 6/11/03

Extension and joint required on some kits. These items are in your kit if required.

IMPORTANT NOTE

The E600C and TE/M600C must be mounted on the end fittings using the triangular brackets provided. DO NOT fit to cill using any other method. Warranty will be invalidated.

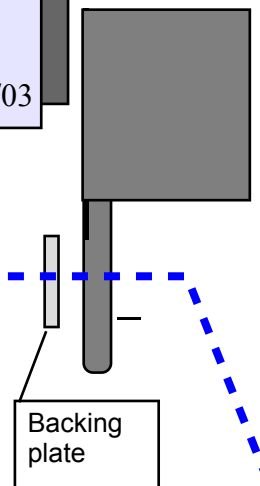

Backing plate

M6 Button (Allen) head bolts with shake proof washers and nylocks through backing plate fitted behind cill.

2 sets of bolts each side.

M6 x 12mm 2 sets of bolts each side

AVS E600C to LDV Side

STEP HEIGHTS: In general it is recommended that the step from ground to the new AVS step is 1" (25mm) above the half way point to the next step. For example if the overall step height were 18" The AVS step should be set at 9.5" leaving a 8.5" second step on an unloaded vehicle.

