

# AVS

All AVS fitting kits are double checked before despatch. Please report any shortages within 3 days of delivery and AVS will ensure a prompt response.



## NEW **M6** BOLTS TO VEHICLE CILL

Parts list for:

TM and TE600C for:  
Peugeot Expert  
Fiat Scudo  
Citroen Dispatch

Item	Qty
LH Bracket (slotted)	1
RH Bracket (slotted)	1
Rear Bracket (Large square hole)	1
M8 x 25	2
M8 washer	6
M8 star washer	2
M8 nutsert	2
M6 x 12	2
M6 x 20	2
M6 x 15 (Used with Mud Flap Bkt)	2
M6 washer	14
M6 spring washer	6
<b>M6 x 25 Allen Key Bolts (For Cill)</b>	6
NEW BOLT KIT March 2004	

### SPECIAL NOTES IMPORTANT.

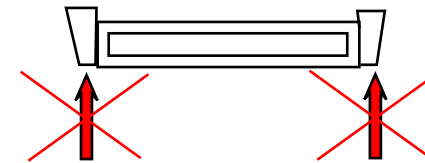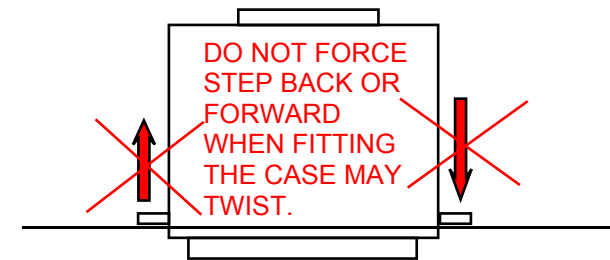


Jan 2001

# AVS

Fitting instructions for TM600C and  
TM600C to Peugeot Expert, Fiat Scudo  
or Citroen Despatch passenger side.

**DO NOT TWIST OR FORCE CASE  
WHEN FITTING. ENSURE STEP  
RUNS SMOOTHLY AFTER FITTING.**

PAGE 1 of 2  
READ ALL  
INSTRUCTIONS

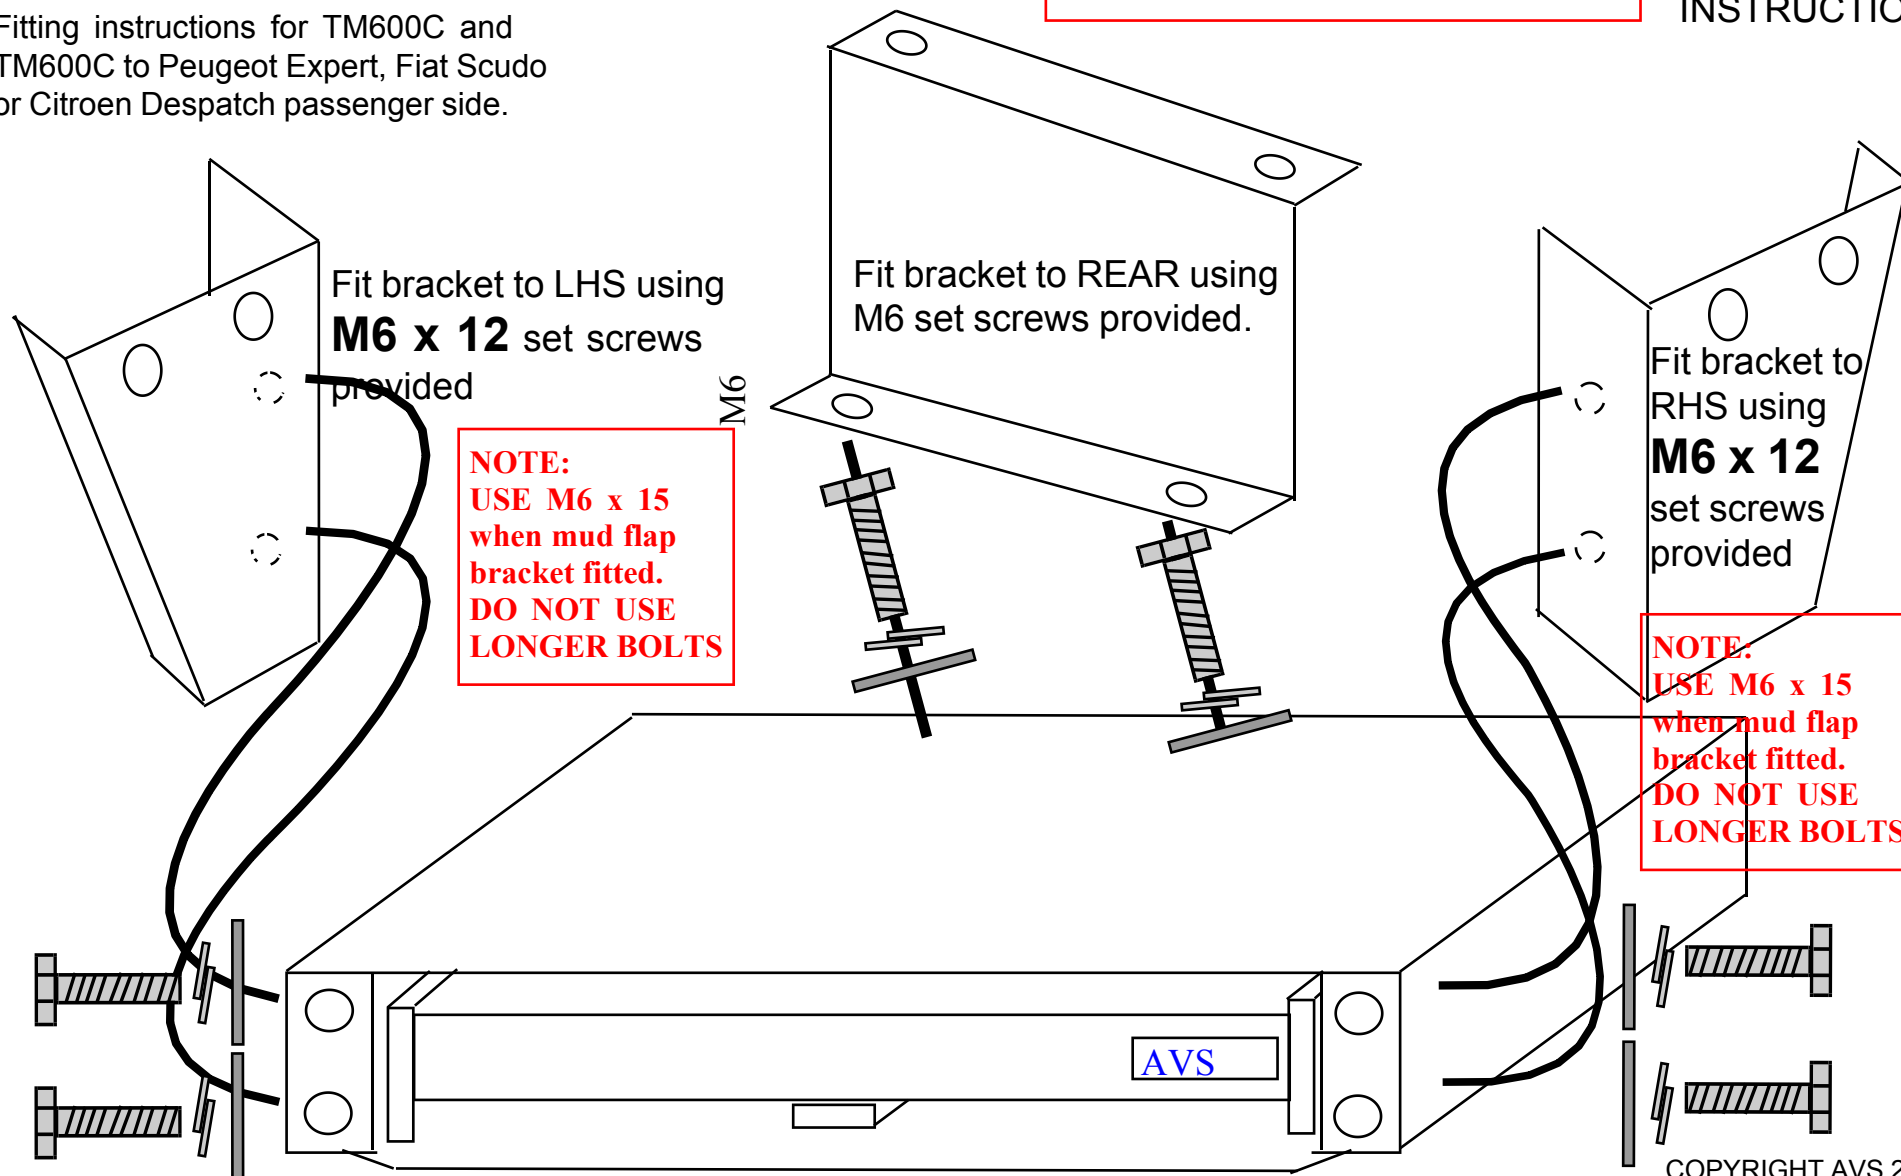

1. Bolt buckets provided to step using M6 set screws already fitted to step
2. Position step against chassis and move rearward until top of case touches cill.  
This will be very near to rear jacking point.
3. Check that step is level leaving an 8mm gap at front (LH of step).
4. Drill M8 clearance in cill for front brackets.
5. Drill holes for captive M8 nutserts in chassis.
6. Remove step and fit captive nutserts.
7. Re-position step and bolt into place.

# AVS

Fitting instructions for TE600C and TM600C to Peugeot Expert, Fiat Scudo or Citroen Despatch passenger side.

