


AVS Fitting Kits
E600 on Mercedes Sprinter and VW
LT Cab/Sideentrance

@ Copyright AVS 2003

AVS Marketing Ltd
Copyright 2000

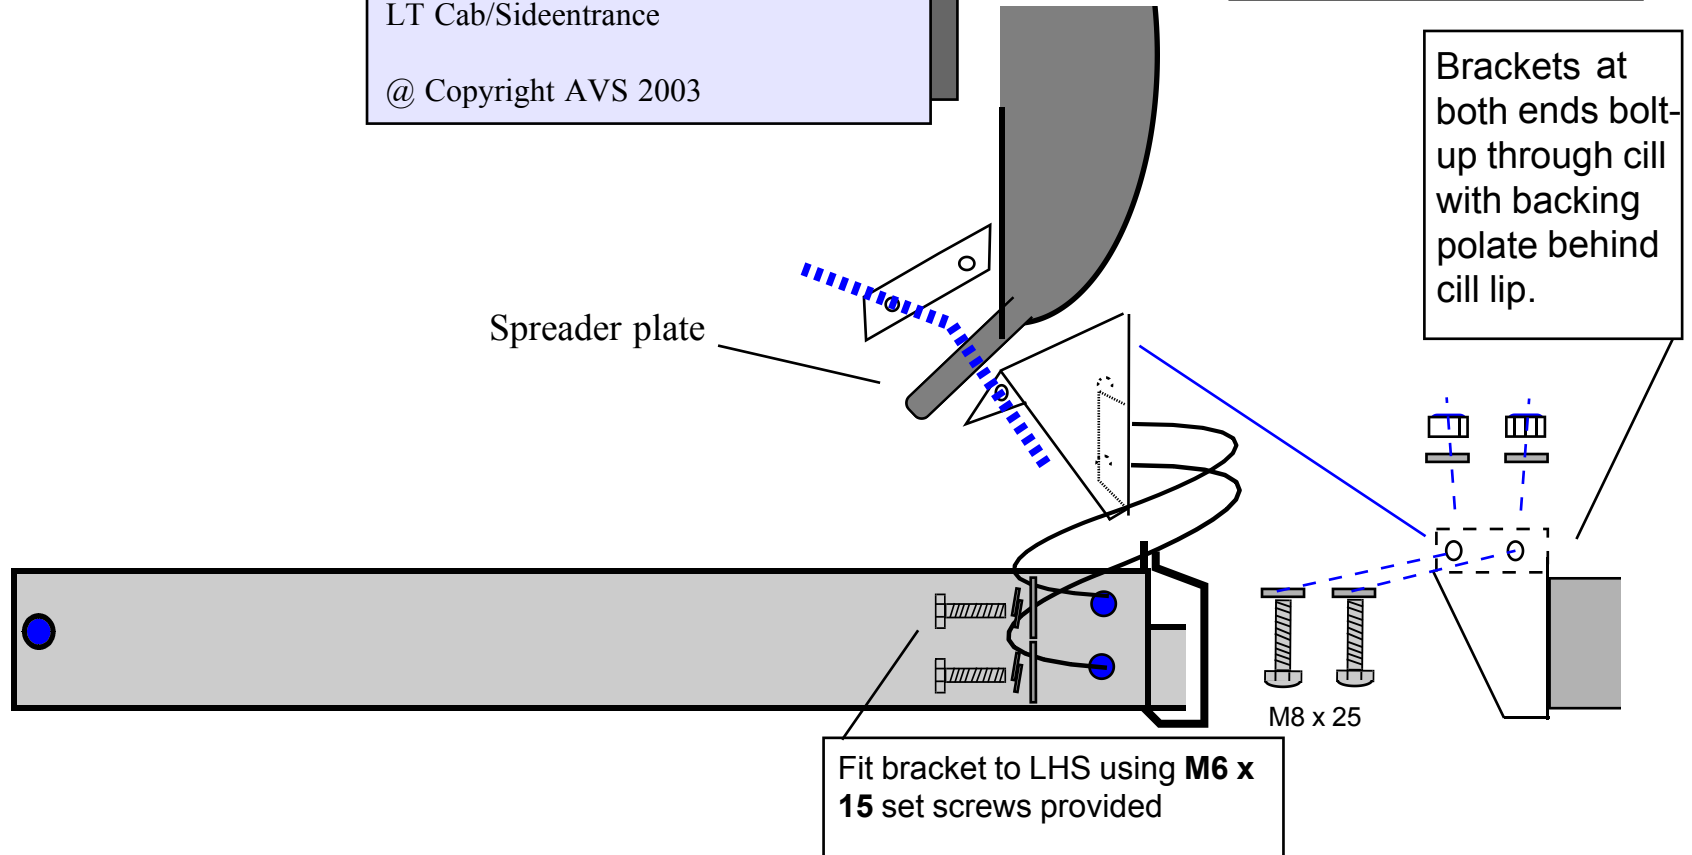

STEP HEIGHTS: In general it is recommended that the step from ground to the new AVS step is 1" (25mm) above the half way point to the next step. For example if the overall step height were 18" The AVS step should be set at 9.5" leaving a 8.5" second step on an unloaded vehicle.

AVS E600C

IMPORTANT NOTE

The E600C must be mounted on the end fittings using the triangular brackets provided. DO NOT fit to cill using any other method. Warranty will be invalidated.