KM600 Pedal Assembly

AVS SERVICE INSTRUCTIONS

Version 0 19/3/04

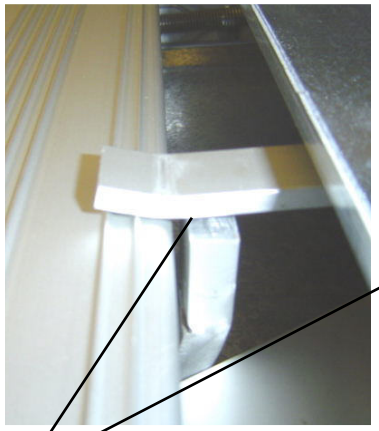

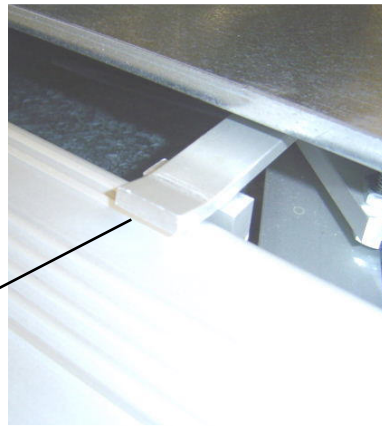

Catch strip should rest just below radius of step tread to ensure it locks against back of step tread when step deployed.

Catch strip lifts over tread when pedal is push down.
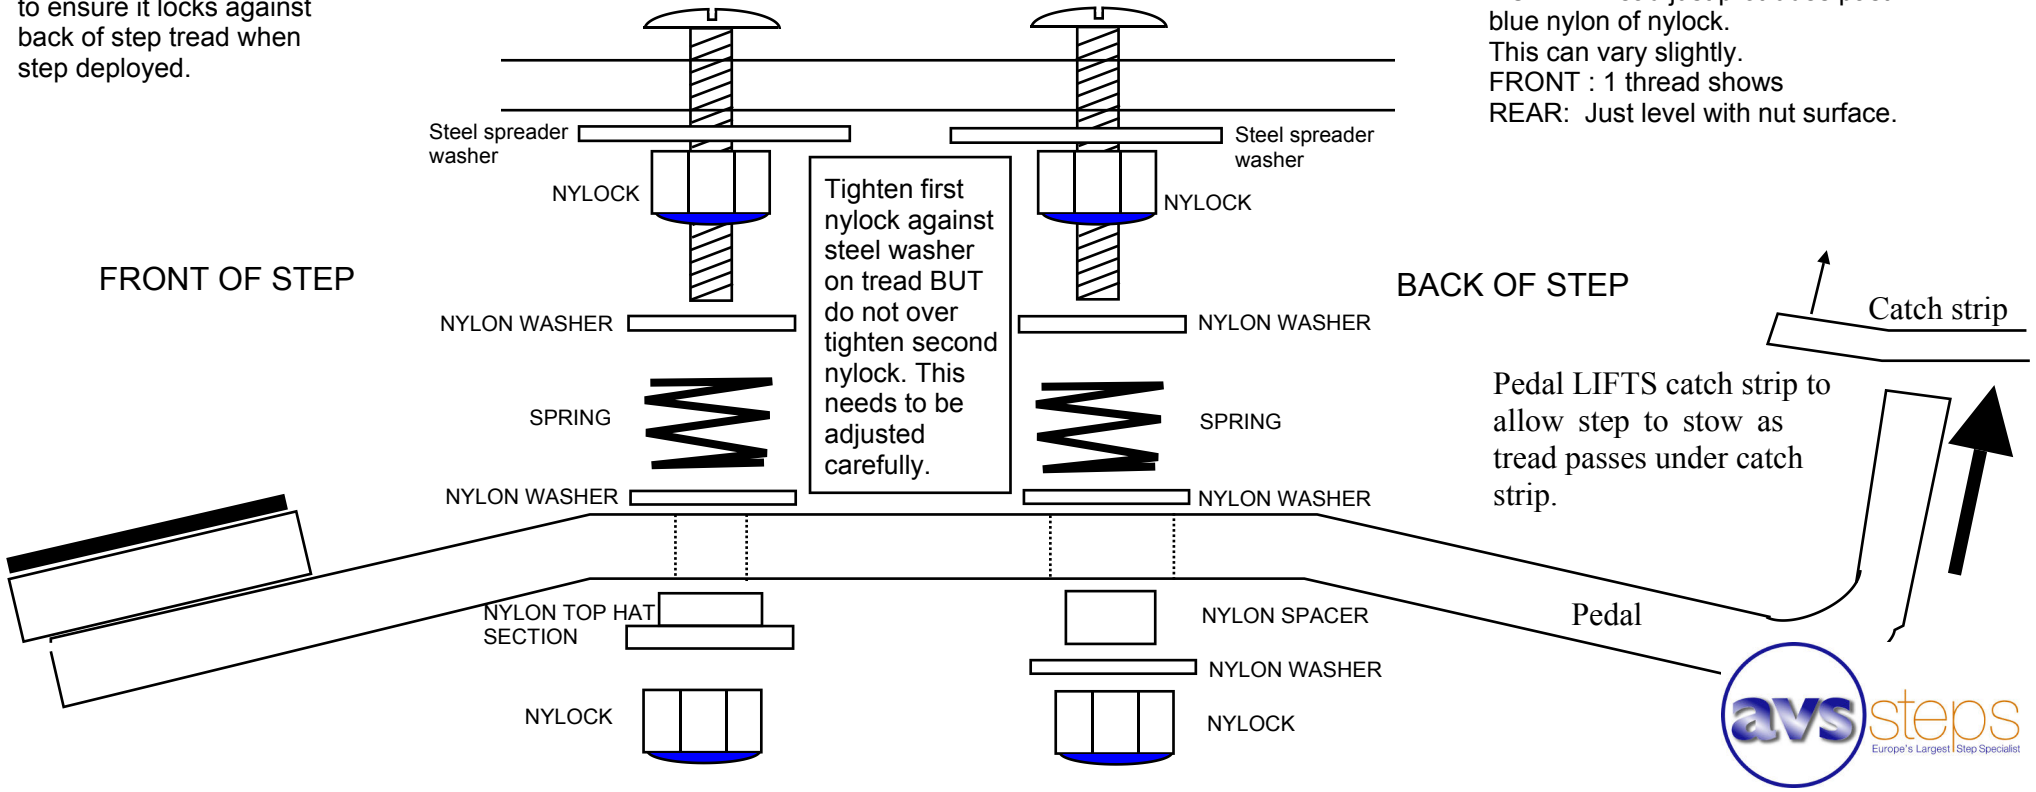
NOTE: Thread just protrudes past blue nylon of nylock.
This can vary slightly.
FRONT : 1 thread shows
REAR: Just level with nut surface.