AVS Taxi Steps (TM/TE) Retrofitting Corners

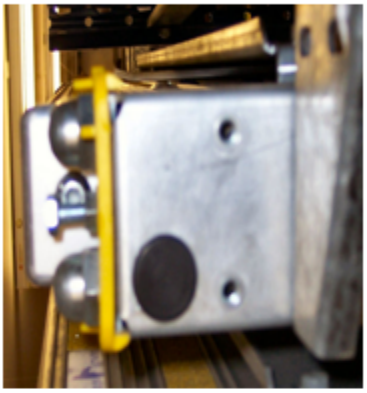

1.
Remove dome nuts and take off back plate (if fitted), then replace dome nuts

2.
Remove rubber grommet from corner of step

3.
Offer the corner piece up to the step and mark the step through the holes

4.
Remove corner and mark with a centre punch

5.
Drill hole(s) using a 5mm bit

6.
Using a 4.8x16 rivet and rivet gun fix corner to step

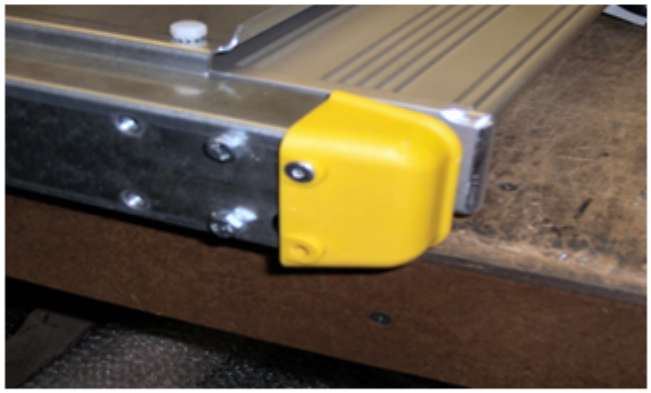

Please note that the above illustrations are for retrofitting old models of TE and TM steps. When in production the new step cassettes will be pre-drilled with two holes each side for taking 2 rivets as fixings. On old models there is nowhere to drill for the lower fixing because of the case design, one rivet is enough to securely fix the corner pieces. As soon as new illustrations become available they will be posted

31.03.2005